## **USER MANUAL**

**TOGGLE DIMMER 700** 



- Manual or Z-Wave on/off and brightness control
- NEW: 700 series Z-Wave chip for better range and faster control • Simple Direct 3-Way: connect with existing on/off switches in 3-

**FEATURES** 

- way, 4-way, and 5-way set-ups, no add-on needed • Scene control: trigger actions with multi-tap (select hubs only)
- Smart bulb mode: disable relay and control the light via Z-Wave
- Night light mode: press down when off to turn lights on to 20%
- Multi-color LED indicator for easy pairing and troubleshooting
- Works with LED and incandescent bulbs (don't use with tubes)

#### SPECIFICATIONS

- Model Number: ZEN74 VER. 1.0
- Z-Wave Signal Frequency: 908.42 MHz
- Power: 120 VAC, 60 Hz
- Maximum Load: 100 W LED, 300 W incandescent; DON'T use with fans, switches receptacles, or tube lights
- Range: Up to 500 feet line of sight
- Operating Temperature: 32-104° F (0-40° C)
- Installation and Use: Indoor only

#### CAUTION

This is an electrical device - please use caution when installing and operating the dimmer switch. Remote control of appliances may result in unintentional or automated activation of power.

Do not use this Z-Wave device to control electric heaters or other appliances which produce the risk of fire, burns, or electrical shock when unattended.

To reduce risk of overheating and possible damage to other equipment, do not install this unit to control a receptacle; a motor-operated appliance; a fluorescent lighting fixture; or a transformer-supplied fixture.

#### 4 **BEFORE YOU INSTALL**

This switch is intended for installation in accordance with the National Electric Code and local regulations. It is recommended that a licensed electrician perform this installation.

### WIRING: READ IT!

1. CHECK THE LOAD: lights only (100W for LED's, 300W for incandescent), DON'T CONNECT THIS SWITCH TO OUTLETS OR TUBE LIGHTS.

2. POWER OFF: turn the circuit power off in the breaker panel before you start. If installing in a multi-switch box with multiple circuits, turn power off at all of the circuits.

3. CHECK THE WIRES: mark load (most often black), line (most often black), neutral (most often white), and ground (most often bare). 14 AWG wires only! Don't rely exclusively on your multimeter to identify the wires!

### NOT SURE WHAT YOU'RE SEEING? WE'LL HELP! SUPPORT.GETZOOZ.COM SEND US PICTURES OF YOUR SET-UP, BEFORE YOU DISCONNECT WIRES.

4. REMOVE THE OLD SWITCH: disconnect the wires and label them with the included label stickers.

5. CONNECT THE Z-WAVE SWITCH: follow all installation steps carefully. Wire the switch EXACTLY like in the diagram.

#### HOW TO INSTALL THE WIRES

1. UNSCREW: carefully turn the screw counter clockwise to make space for the wire. DO NOT unscrew completely.

- 2. PRESS DOWN: once it's loose, press the screw down with your finger so it catches the thread. 3. INSERT WIRE: make sure the wire is perfectly
- straight, then insert it into the terminal while STRIP WIRE AT 1/2-5/8" holding the screw down. DO NOT wrap wires
  - around the terminal screws! TIGHTEN: turn the screw clockwise to tighten
    - the wire. DO NOT OVERTIGHTEN!

### COMPLETE INSTALLATION

Secure your Z-Wave switch in the box with mounting screws, handling the wires with care. Always use the supplied short screws Install the wall plate and restore power to the circuit.

#### TEST THE SWITCH

The LED indicator will **not** light up when you turn the power back on. that's normal. Toggle the switch up for ON and toggle it down for OFF. If the test fails, please check that:

- power is fully restored to the circuit

00

- wiring matches the instructions **exactly**
- the load isn't too large and overheating the switch causing it to shut off

#### **A**WARNING

- This product should be installed indoors upon completion of any building renovations.
- Prior to installation, the device should be stored in a dry, dust-and-mold-proof place. • Do not install the switch in a place with direct sun exposure, high temperature, or humidity.
- · Keep away from chemicals, water, and dust.
- · Ensure the device is never close to any heat source or open flame to prevent fire. • Ensure the device is connected to an electric power source that does not exceed the
- maximum load power

J

Ø

• No part of the device may be replaced or repaired by the user.

#### **Z-WAVE CONTROL**

#### 1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the app (or web interface).

Not sure how? Scan one of the QR codes below for step-by-step instructions or get in touch: www.support.getzooz.com

2. Finalize inclusion at the switch. TOGGLE UP 3 TIMES QUICKLY

if using traditional Z-Wave inclusion.

SCAN THE QR CODE / ENTER THE 5-DIGIT DSK

if using the new SmartStart method.

The LED indicator will blink blue to signal communication and turn green for 3 seconds if inclusion is successful or turn red for 3 seconds if the pairing attempt fails.

#### NEED SOME HELP? ask@getzooz.com

Choose your hub and scan the QR code with your phone's camera. Then click on the link to access the step-by-step pairing instructions.





Ô

Get more tutorials and helpful tips at ww.support.getzooz.com

#### TROUBLESHOOTING

#### The dimmer won't add to your system? Try this:

- 1. Initiate **EXCLUSION** and toggle the dimmer down 3 times quickly.
- 2. Toggle the dimmer up **4-5 times quickly** when adding it. 3. Bring the gateway controller (hub) **closer** to the dimmer,
  - it may be out of range.

#### ADVANCED SETTINGS

Please refer to your controller's user guide for advanced programming instructions as they are a little different for every software.

Not sure where to start? Go to www.support.getzooz.com for detailed instructions on how to change the settings on SmartThings, Vera, and more.

Or just email us: ask@getzooz.com

#### **CUSTOMIZE YOUR SWITCH**

Here is a selection of settings available to customize your switch. Scan the QR code for a full list of parameters and look below for how to access them on your hub.

- Adjustable **ramp rate** for fade-in/fade-out
- Double tap and single tap behavior
  - Smart Bulb Mode (disable the relay):
  - HOLD DOWN for 10 seconds then 5 x TAP UP
  - On/off status after **power failure**



Choose your hub and scan the QR code with your phone's camera. Then click on the link to learn how to access and change the advanced settings for the switch on your hub.



Hubitat



Vera

SmartThings

Home Assistant

SCENE CONTROL

You can trigger scenes or control other connected devices in your network using this switch. Just enable the setting in Parameter 13 and verify that your hub supports scene control. Assign scenes or actions to 1-tap, 2-tap, 3-tap, 4-tap, and 5-tap as well as to held and released for toggle up and toggle down.

Scan the QR code for scene control programming instructions on your hub.

**QUESTIONS?** 

ask@getzooz.com

#### ASSOCIATION

This dimmer switch supports Group 1 with up to 1 devices for lifeline communication and Group 2 and 3 with up to 5 devices. This device will send BASIC REPORT to Group 1, BASIC SET to group 2, and MULTILEVEL to Group 3 (for remote dimming) when operated manually.

You can set direct association to have the switch control another Z-Wave device independently of the hub by using Group 2 and 3. Not every hub exposes direct association settings in the interface so please go to www.support.getzooz.com to see if your system allows for direct association.

This product can be included and operated in any Z-Wave

network with other Z-Wave certified devices from other

manufacturers and/or other applications. All non-battery

regardless of vendor to increase reliability of the network.

remove smart home network hacking risks. This device is

equipped with a unique authentication code for trusted

This product features the latest Security 2 (S2) framework to

operated nodes within the network will act as repeaters




wireless communication.

#### ZEN74 WIRING DIAGRAM FOR SINGLE POLE INSTALLATION

1 Insert the ground (bare) wire into the **Ground** terminal (not shown in the diagram)

2 Insert the power source wire to Line terminal and load wire to Load terminal. Load and line CAN'T be swapped so make sure you identified them correctly!

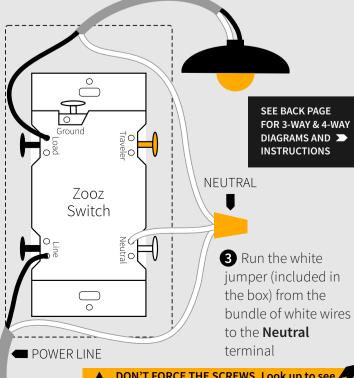

DON'T FORCE THE SCREWS. Look up to see how to install the wires correctly.

4. Get troubleshooting tips for your hub at www.support.getzooz.com

### The dimmer won't control the lights manually anymore? Try this:

- 1. Turn the power off at the breaker and check if a wire didn't get loose.
- 2. Exclude the dimmer from the hub or **reset** it in case manual control was accidentally disabled.
- 3. The load may be incompatible so try it with a single incandescent bulb.

#### EXCLUSION (REMOVING / UNPAIRING DEVICE)

- 1. Bring your Z-Wave gateway (hub) close to the switch if possible
- 2. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzooz.com)
- 3. Toggle the dimmer down 3 times quickly (the LED indicator will start blinking blue)
- 4. Your hub will confirm exclusion, the LED indicator on the switch will turn green for 3 seconds, and the device will disappear from your controller's device list

#### FACTORY RESET

If your primary controller is missing or inoperable, you may need to reset the device to factory settings. To reset the switch, hold the toggle DOWN for 10 seconds until the LED indicator starts blinking. Release the toggle, and immediately after, toggle the switch DOWN 5 times to complete the reset. The LED indicator will flash blue 3 times and turn red for 3 seconds to confirm successful reset.

NOTE: All previously recorded activity and custom settings will be erased from the device's memory.

This is an ETL certified device. ETL, just like UL, is a Nationally Recognized Testing Laboratory. The ETL mark is proof of product compliance with North American safety standards.

#### WARRANTY

This product is covered under a 12-month limited warranty. To read the full warranty policy or file a warranty claim, please go to www.getzooz.com/warranty

IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND AFEILIATES BE LIABLE FOR ANY INDIRECT INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT. OR OTHERWISE EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DA-MAGES. ZOOZ'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CON-NECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DA-MAGES ARE CLAIMED, ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED FOR DELI-VERY IN THE EVENT OF NONDELIVERY.

FCC NOTE


THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS ONLY, DO NOT IMMERSE IN WATER. NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: 1. This device may not cause harmful interference, 2. This device must accept any interference received, including interference that may cause undesired operation This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio communications lowever, there is no guarantee that interference will not occur in any given installation If this equipment causes harmful interference to radio or television reception, the user may try to correct the interference by taking one or more of the following measures

- Reorient or relocate receiving antenna
  Increase the separation between equipment and receiver
- Connect equipment into a separate outlet or circuit from received
- Consult the dealer or an experienced radio/TV technician for additional assistance

All brand names displayed are trademarks of their respective holders © 7007 2021

## ZEN74 WIRING DIAGRAMS FOR THE MOST COMMON 3-WAY INSTALLATIONS

For more diagrams or to request custom instructions go to **support.getzooz.com** 

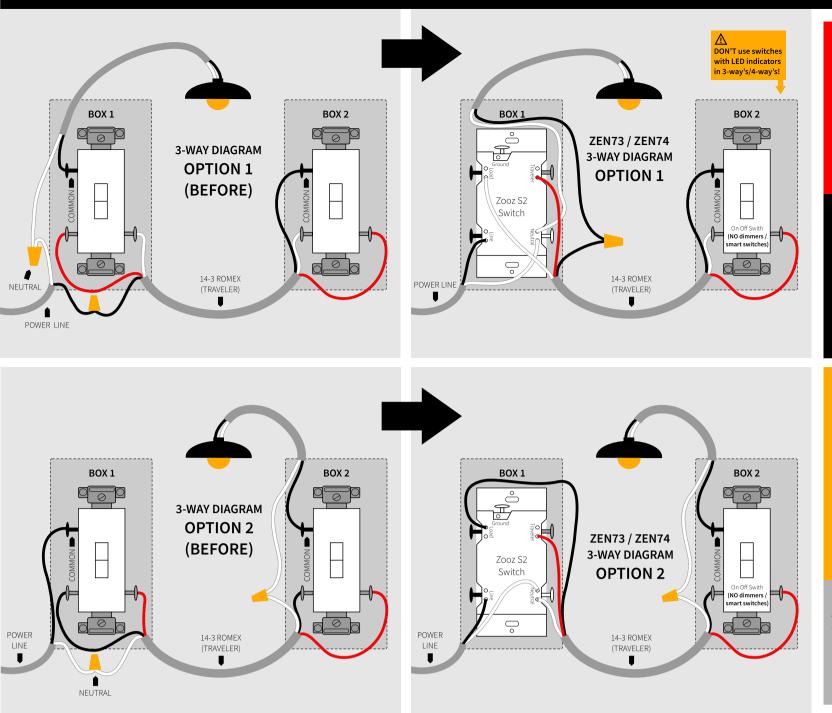

## **STOP!**

Wire and screw position, as well as color codes are for illustration only. You should not follow the colors and positioning in the illustration blindly. Always identify all wires prior to installing Zooz switches and make sure you can match the diagrams to your set-up exactly. Don't experiment or attempt a "trial-and-error" installation for your own safety.

## NOTE!

If you are not comfortable identifying the wiring and completing the installation, please consult a licensed electrician.

Make sure you have identified all wiring correctly before connecting the switch. If your wiring doesn't match any of the below diagrams, contact our support: ask@getzooz.com

## A ON/OFF SWITCHES ONLY

Do not connect Zooz Z-Wave dimmers to an existing 3-way dimmer, illuminated switch, or an electronic add-on switch. Zooz switches can only be wired with mechanical on/off switches in a 3way or 4-way setting!


To simplify the diagrams, we did not include connections for the ground wire. Remember that all Zooz switches need to be wired according to the electrical code, with ground wire connected to the ground terminal.

Always install your Zooz ZEN74 dimmer in the box with direct connection to power line. Diagrams and instructions in this manual are for ZEN73 and ZEN74 models ONLY!

For more diagrams or to request custom

instructions go to **support.getzooz.com** 

## ZEN74 WIRING DIAGRAM FOR THE MOST COMMON 4-WAY INSTALLATION

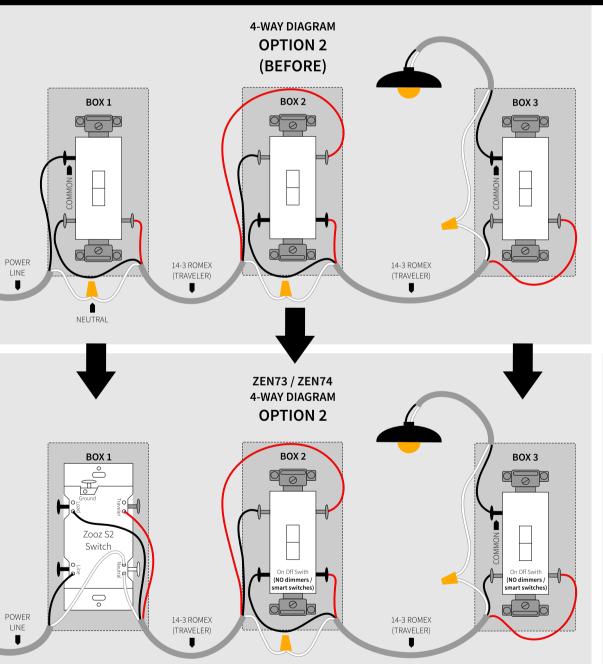

# **NEED HELP?**

If you're having trouble reading the diagrams or don't see your wiring set-up here, get in touch! We have **more 3-way, 4-way, and 5-way diagrams** and instructions. There are many ways to wire multi-point control set-ups so unless you can match your wiring to the diagrams here, please don't attempt the installation for your own safety.

www.support.getzooz.com ask@getzooz.com


# **RANGE TEST TOOL**

## **MORE COLOR?**

## Zooz rocker (decora) style switches now come with replaceable paddles in different colors!

Please get in touch with our support to check which colors are currently available and how to order replacement paddles for the ZEN71, ZEN72, ZEN76, and ZEN77 models.

Zooz switches will match the shade of standard Leviton switches and wall plates available at any major retailer.

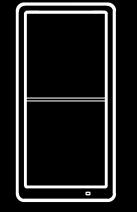

You can now easily check if the switch is within your Z-Wave hub's range:

Press and hold the toggle down for 10 seconds until the LED indicator starts blinking. Release the toggle and within 2 seconds, toggle it down again 2 times quickly. The LED indicator will then report signal strength.

**Solid green =** direct communication with the primary controller is stable

**Flashing green =** direct communication with the primary controller is established but signal is weak

Solid blue = stable communication with hub via repeaters Flashing blue = communication with the primary controller is established via repeaters but signal is weak Solid red = communication with the primary controller has failed

Tap the lower paddle to exit testing mode.

**NOTE:** This function may only be activated once the switch has been included to a Z-Wave network.

The Simple Direct 3-Way/4-Way implemented in this device is a unique Z-Wave multi-point control solution covered under U.S. Patent 10,219,353 B1.